




1.

Open the garage, remove the loose side panels from the garage.



2.

Lift canopy and close garage door.

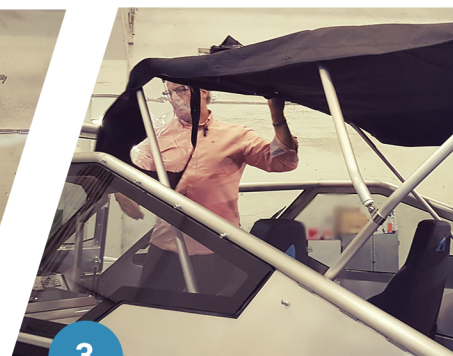

3.

Extend the stand, pull down the front panels over the windows




4.

Attach front side sections, but not the mid section.




5.

Attach SB side panel, using the zipper. Start from stern.

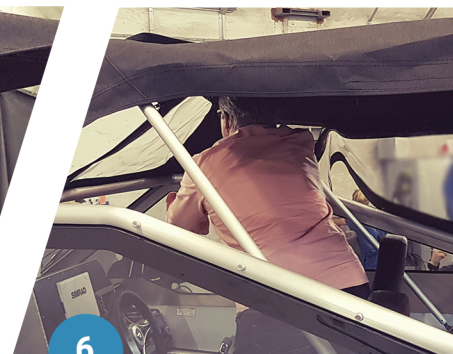

6.

Pull the zipper all the way to front windows.

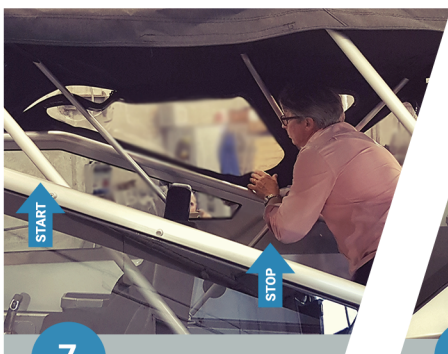


7.

Attach side panel to window frame. See start/stop position above.



8.

Attach PS panel using zipper. Start from stern upper corner.

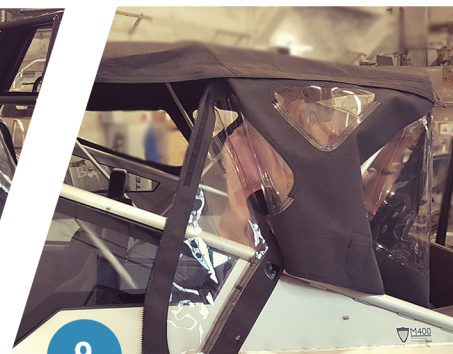

9.

Close the zipper.



10.

Attach side section to the window frame, start from bow.



11.

Attach stern panel, using the zipper. Start from SB side.



12.

Attach PS strap but do not tension it yet.




13.

Attach rubber strings.




14.

Attach SB strap but do not tension it yet.

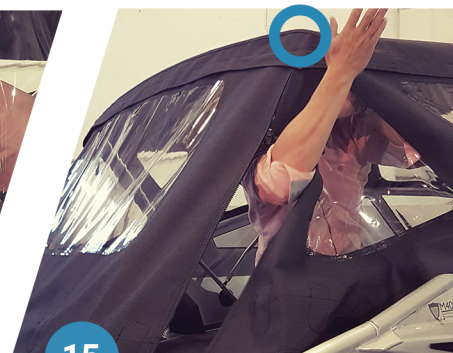

15.

Attach zipper between stern and side panel. Lift roof skirt to get it tight, then close.

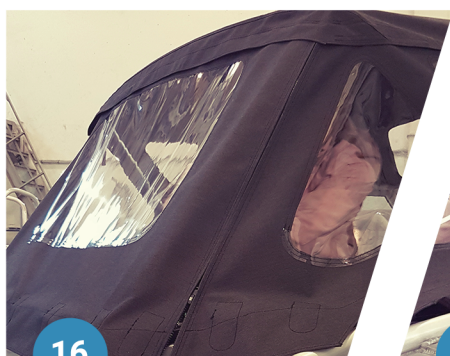


16.

Pull down the zipper.



17.

Attach the remaining part of side panels to the cockpit frame.

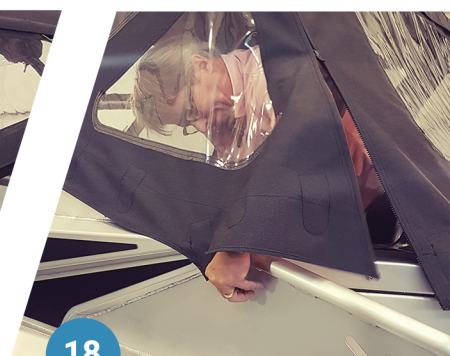

18.

Repeat step 15-17 on PS.



19.

Close both stern panel zippers.




20.

Fasten mid section. At port, it's easier from bow cockpit.



21.

Adjust strap tension. Done!

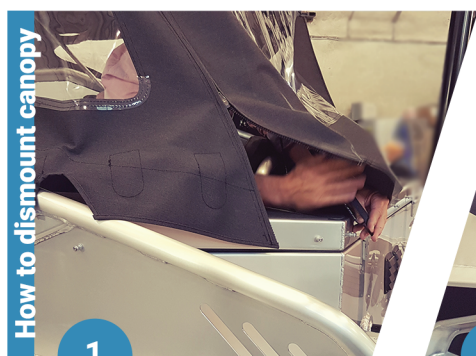

1.

Release straps.



2.

Open zippers and remove stern panel.



3.

Remove both side panels. Starts with buttons, then zipper.




4.

Loosen front panels and fold them upwards, laying flat on roof.




5.

Collapse the frame with the roof.

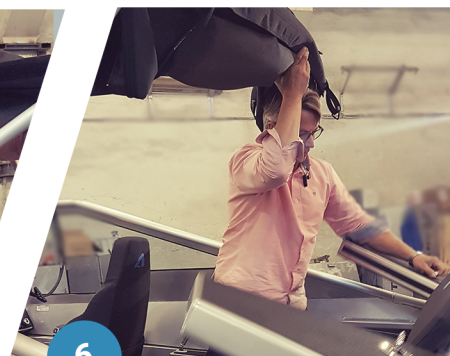

6.

Open the garage

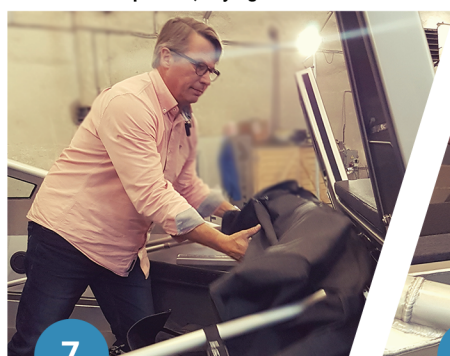

7.

Lower the canopy into the garage.



8.

Finally, place the rolled side and back panels on top. Close garage.



You're done!

If you prefer to use the canopy as a sunroof, just skip the side and stern sections, and make sure to tension the stern straps.

Try to beat the time set in our factory. Up & down in 4 minutes and 30 seconds. If you do, let us know at info@anytec.se!